

EOS DIGITAL REBEL/EOS 300D DIGITAL Firmware Update Installation Instructions



Firmware version 1.1.1

Precautions

Use a fully charged Battery Pack BP-511/BP-512 or dedicated AC Adapter Kit (Optional) ACK-E2 for firmware update.


Do not shut off the power during the firmware writing operation. A power failure during the firmware writing operation may disable the camera.

Do not open the CF card slot cover or press any camera buttons during the firmware writing operation.

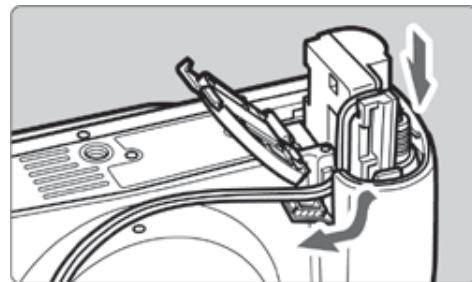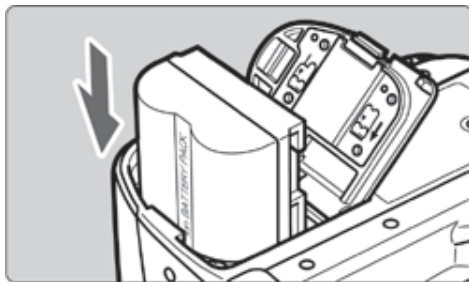


EOS DIGITAL REBEL/EOS 300D DIGITAL firmware update procedures

(1) Copy the "E3kr111.fir" file to the formatted CF card.

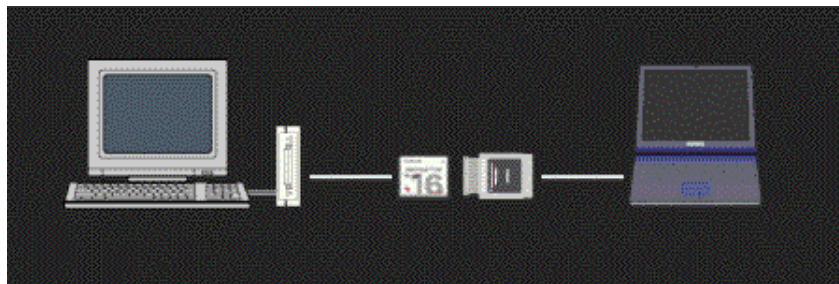

If you do not have any of the card reading devices,


1. Insert the CF card into the EOS DIGITAL REBEL/EOS 300D DIGITAL, and connect it to the PC with Interface Cable IFC-300PCU.
2. Double-click the "UploadFirmware*" in the decompressed folder, and follow the instructions so that the "E3kr111.fir" file can be copied onto the CF card in the EOS DIGITAL REBEL/EOS 300D DIGITAL.

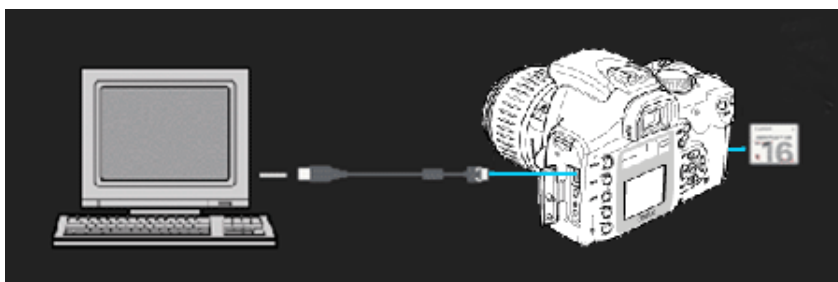

When you attempt to transfer the data to the CF card in the EOS DIGITAL REBEL/EOS 300D DIGITAL with the "UploadFirmware*" program, do not open the CF card slot cover, turn the Power Switch or turn the power off until the data transfer is completed. Any of the above operations during data transfer will disable the firmware update.


* Macintosh version of UploadFirmware requires Mac OS 9.0 to 9.2.

(2) Insert the CF card with the firmware into the camera and turn the Power Switch on.

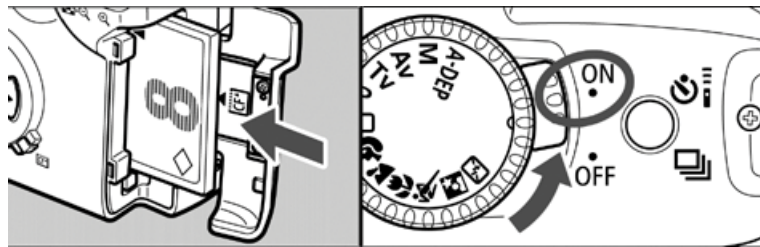


The following message will appear on the LCD after the firmware update program activates.

When using the "UploadFirmware" utility, please be sure that data transfer is completed. Next step, open and close the CF card slot cover. Then, the firmware update program starts and the following message will appear on the LCD.

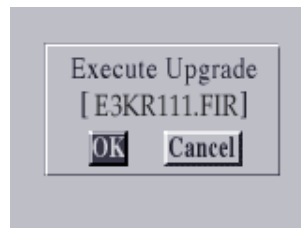

(3) Select [OK] with Cross keys of the camera and press the "SET" button.

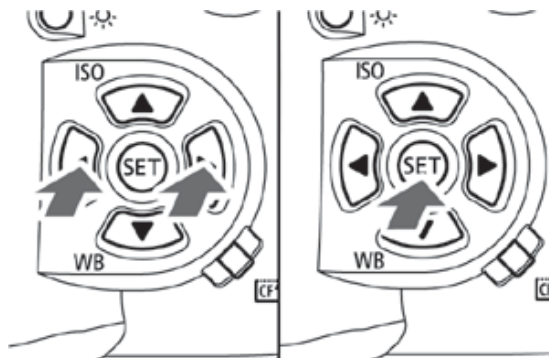

If you select [Cancel] and press the "SET" button, the firmware update is cancelled.

If the message of "Execute Upgrade" does not appear, please return to Procedure (1) as the firmware is not copied correctly.


The first step in installing the new firmware is checking the currently installed firmware.

A message of [Checking Firmware] appears and the firmware currently installed is being checked. This step will take approximately 6 seconds.


The image shows a rectangular LCD screen with a grey background. The text "Checking Firmware.." is displayed in a simple, sans-serif font at the top of the screen.

Do not press the shutter button during this step. Checking firmware will be cancelled by pressing the shutter button.

After checking the current firmware, both the current and the replaced versions will be displayed on the LCD as follows.

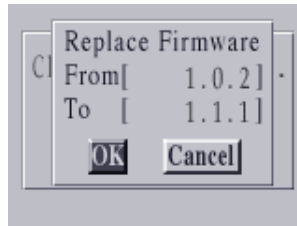

(4) Execute the firmware update after confirming the version to be installed, by selecting [OK] with Cross keys and pressing the "SET" button.

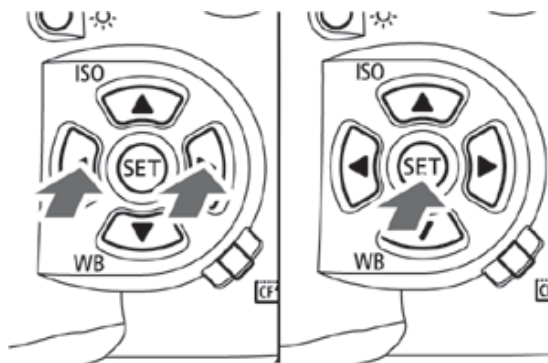

If you select [Cancel] and press the "SET" button, the firmware update is cancelled.

The following message will appear during firmware updating.



The update will take approximately 4 minutes.


Do not turn the power off during the firmware writing operation.

Do not open the CF card slot cover or press any camera button during the firmware writing operation.

When the update is completed, the following message will appear on the LCD.




(5) Complete the firmware update by pressing the "SET" button.

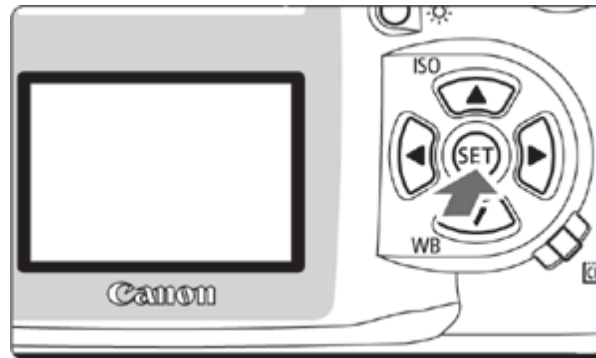

The firmware update is now completed. Format the CF card before using it again.

Verifying the firmware update

If firmware version is "1.1.1", updating is completed properly. To confirm the firmware version, turn the Power Switch ON, and press the MENU button to display the menu. Press the Cross keys and display "Set-up 2 menu", you will see the "Firmware Ver.1.1.1" at the end of the settings shown in yellow, which is the number of the firmware version. For more details, please refer to the instruction manual at page 28-31.

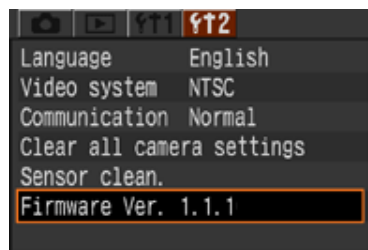

If an ERROR message appears during the firmware update

In case the following message appears during the firmware update, please press the "SET" button and return to the beginning of the procedure. If you still have a problem, please contact the Canon Service Center in your region.

